

1.2m Quick-Deploy SMC Antenna System

ASSEMBLY



Unpack and unfold tripod assembly and lock leg assemblies into place with threaded knob.



1.2m Quick-Deploy SMC Antenna System

ASSEMBLY

Attach Panel 1 to tripod mount as shown. Lock Panel 1 into place by sliding lock plate over pivots and tightening threaded knobs.

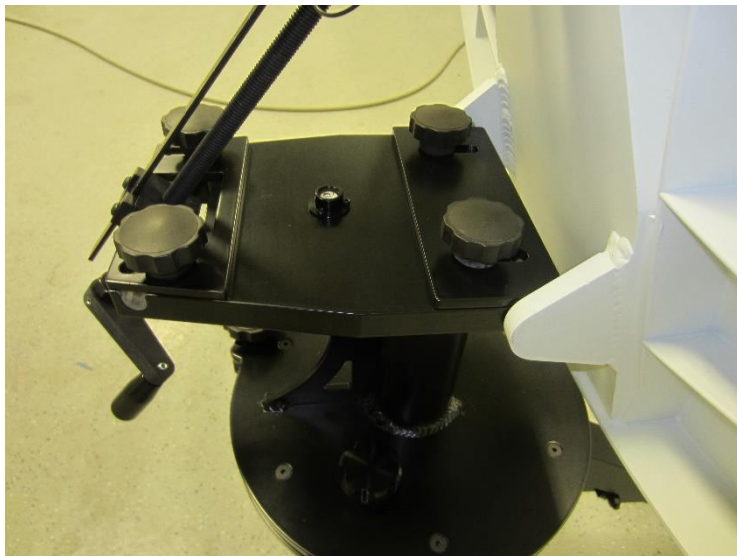
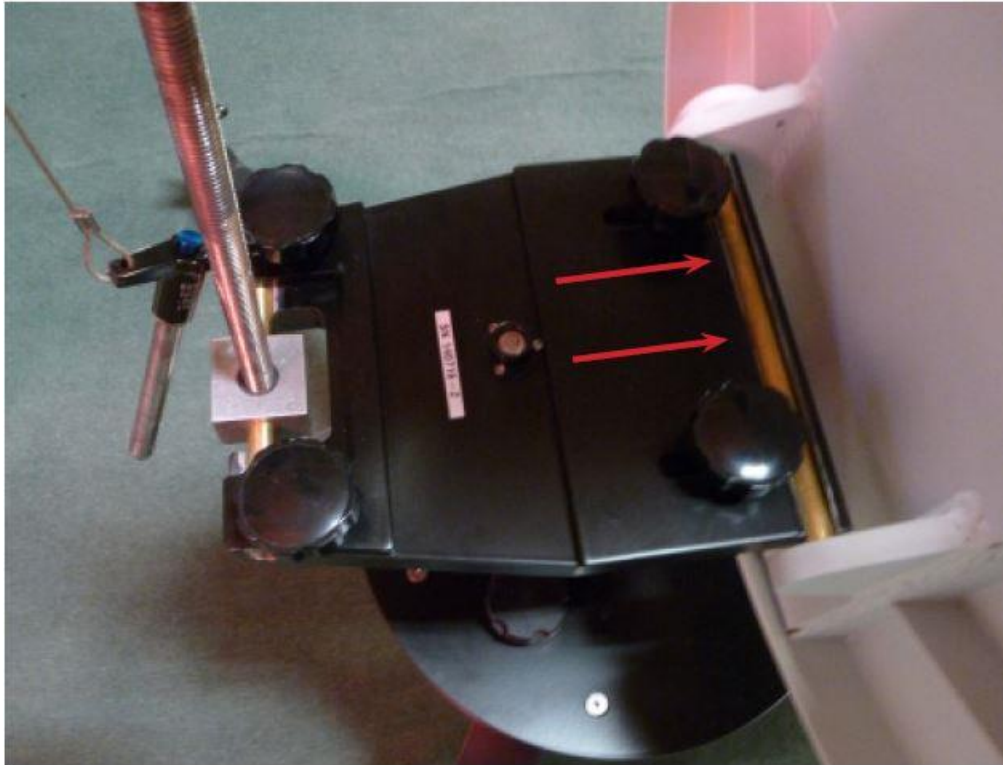


Please note that color and style of threaded rods, clips, and knobs may vary.

1.2m Quick-Deploy SMC Antenna System

ASSEMBLY

Secure Elevation Jack using threaded knobs. Insert quick release pin to complete installation of Elevation Jack.

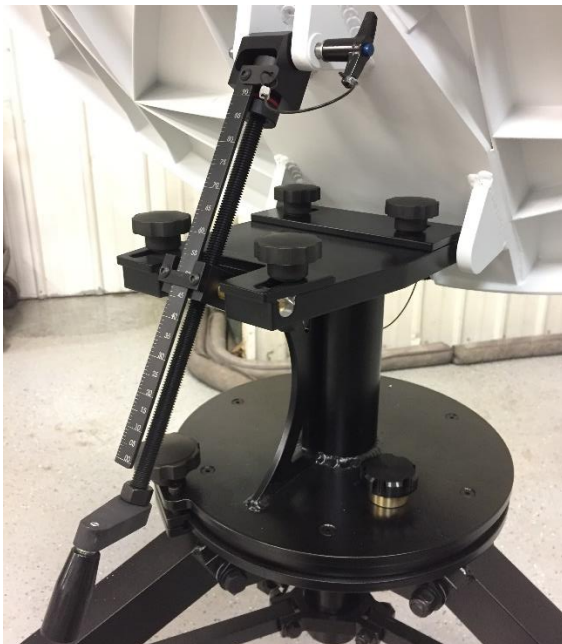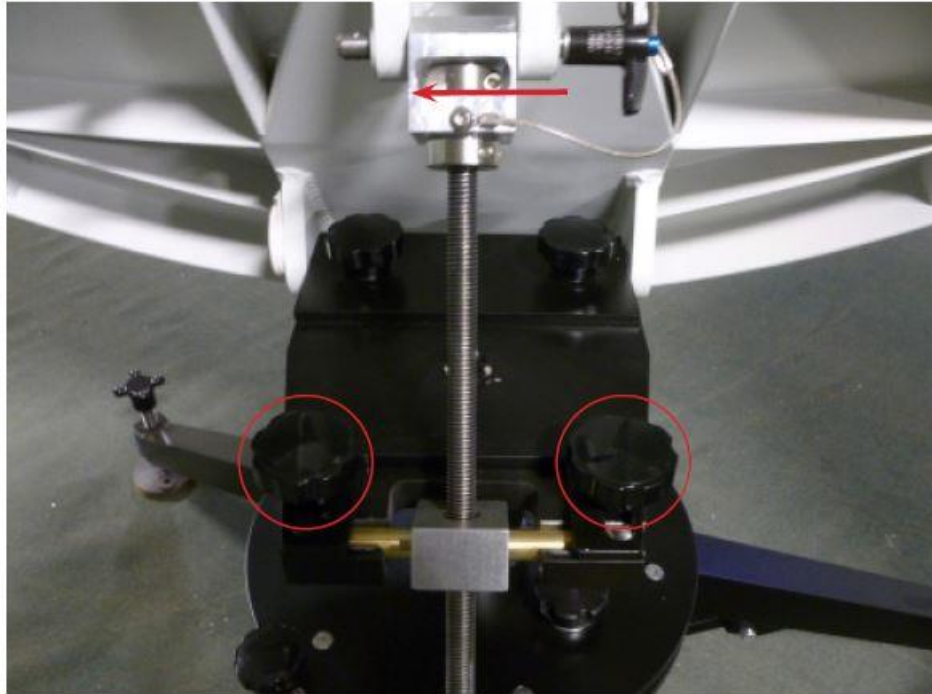


Please note that color and style of threaded rods, clips, and knobs may vary.

1.2m Quick-Deploy SMC Antenna System

ASSEMBLY

Attach Panel 2 to Panel 1. Make sure that the dowel pins on the inner edge fit securely in place. Lock panels together using latches.

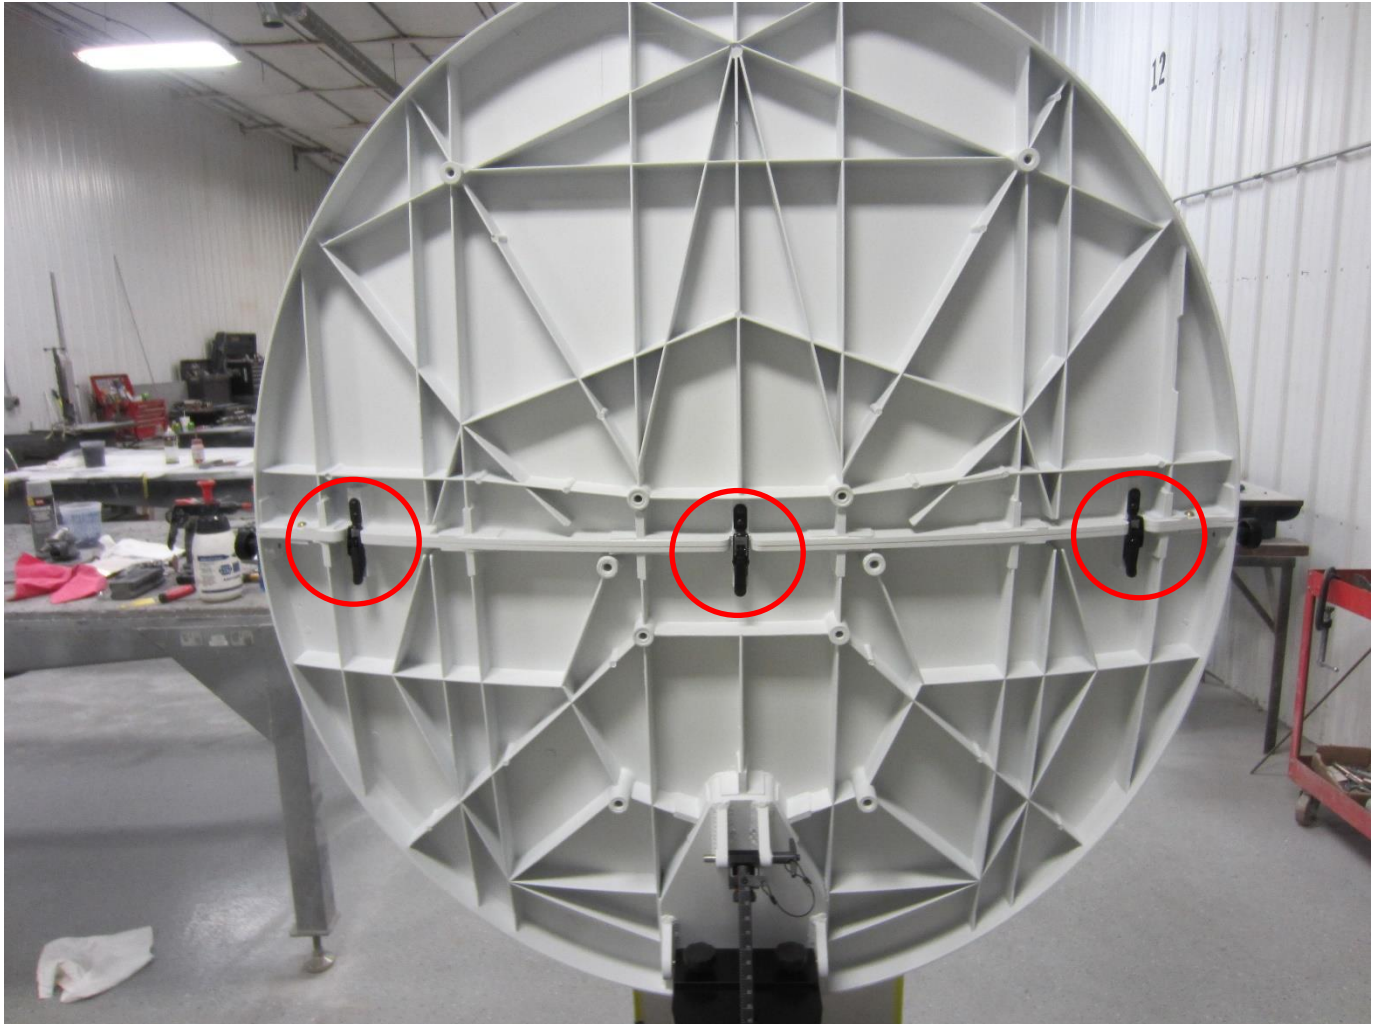

1.2m Quick-Deploy SMC Antenna System

ASSEMBLY


Screw feed boom struts to panel sides.



1.2m Quick-Deploy SMC Antenna System

ASSEMBLY

Attach feed boom to Panel 1 by removing the quick release pin from feed boom. Align mounting holes in feed boom to attachment block on Panel 1 and insert pin. Attach struts using threaded knobs. Attach feed to feed boom assembly. Secure with threaded knob.

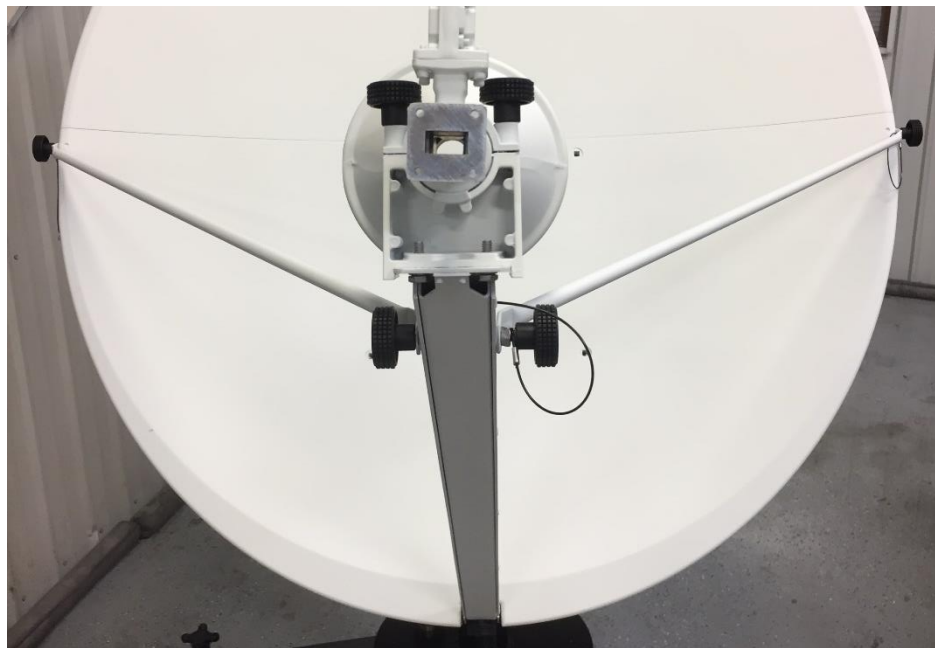

Assembly is now complete.