

## 1.2m Quick-Deploy SMC Antenna System

### ASSEMBLY



Unpack and unfold tripod assembly and lock let assemblies into place with threaded knob.



## 1.2m Quick-Deploy SMC Antenna System

### ASSEMBLY

Attach Panel 1 to tripod mount as shown. Lock Panel 1 into place by sliding lock plate over pivots and tightening threaded knobs.

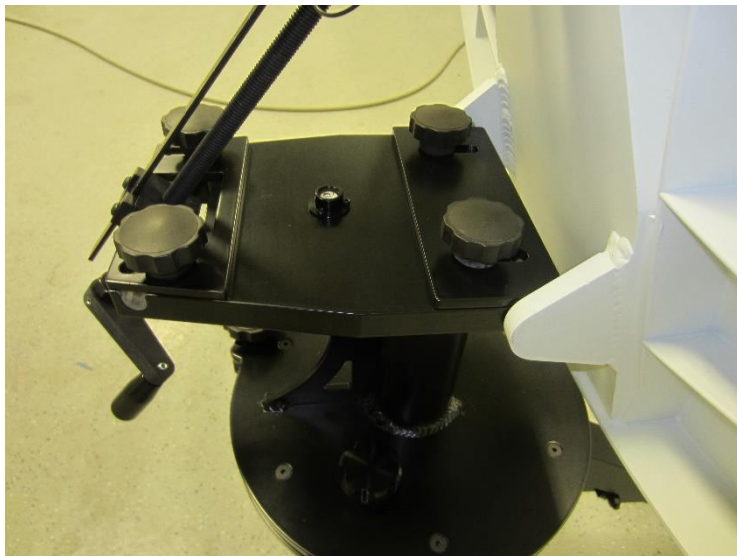
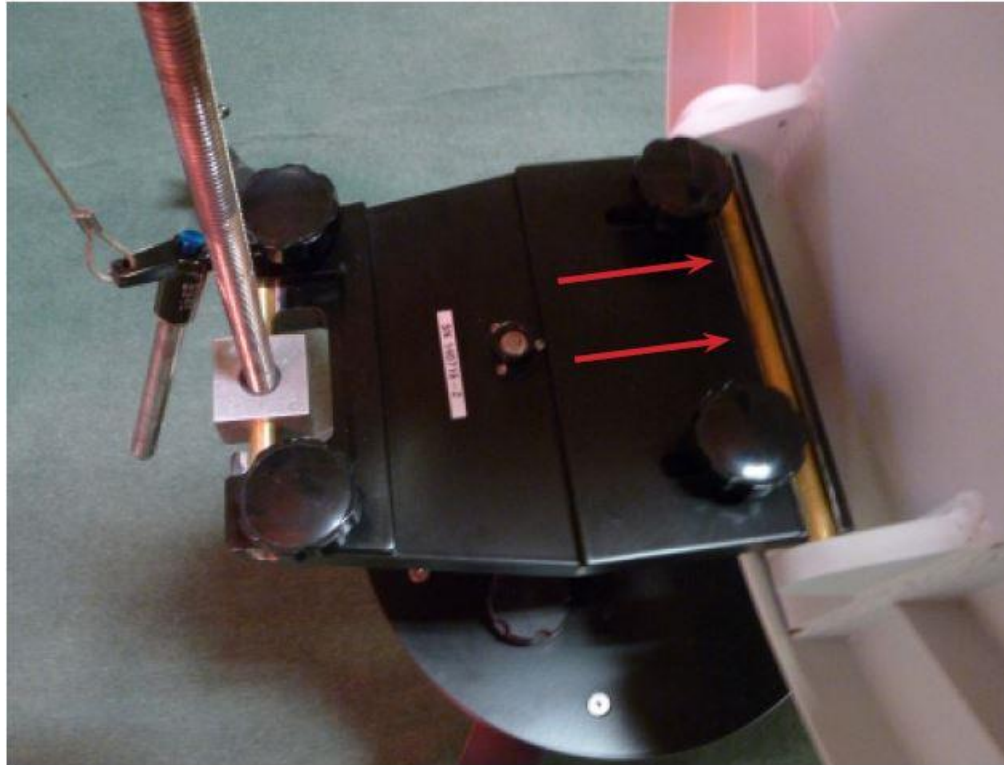


*Please note that color and style of threaded rods, clips, and knobs may vary.*

## 1.2m Quick-Deploy SMC Antenna System

### ASSEMBLY

Secure Elevation Jack using threaded knobs. Insert quick release pin to complete installation of Elevation Jack.

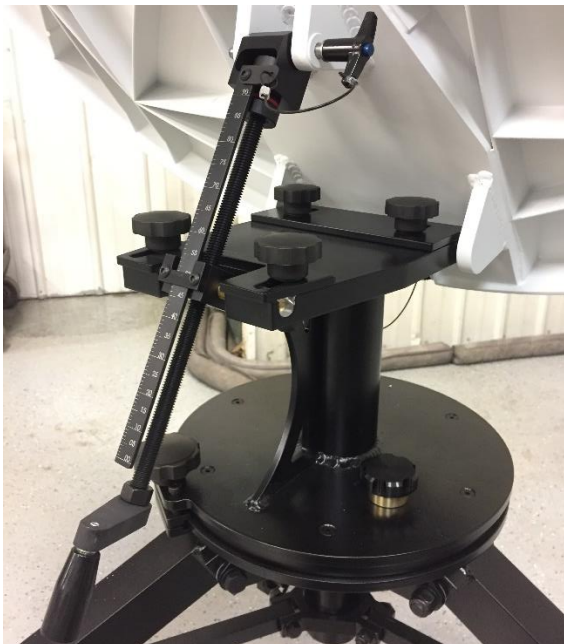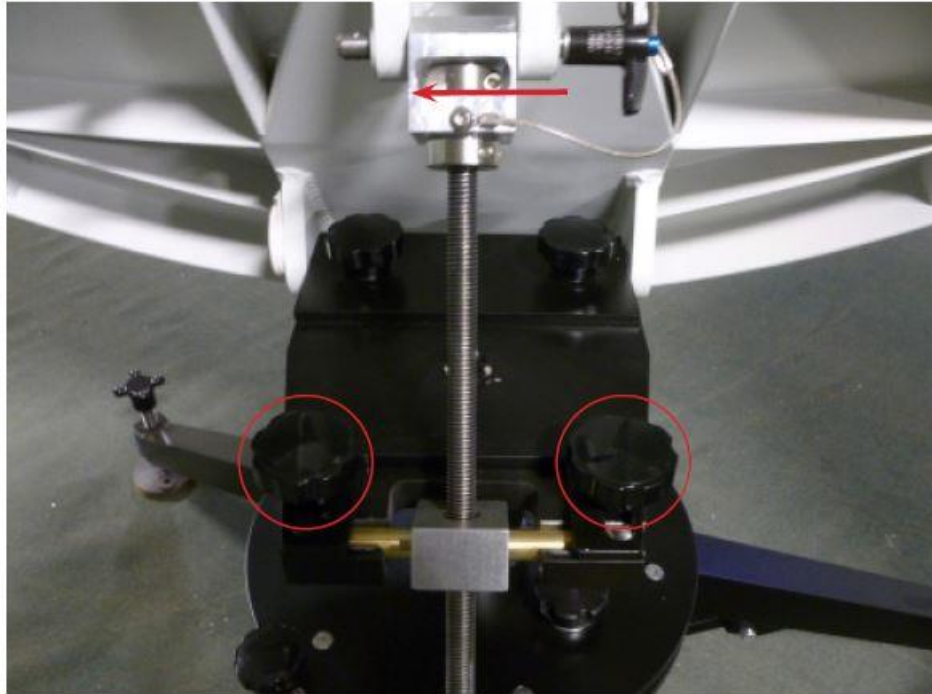


*Please note that color and style of threaded rods, clips, and knobs may vary.*



## 1.2m Quick-Deploy SMC Antenna System

### ASSEMBLY

Attach Panel 2 to Panel 1. Make sure that the dowel pins on the inner edge fit securely in place. Lock panels together using latches.

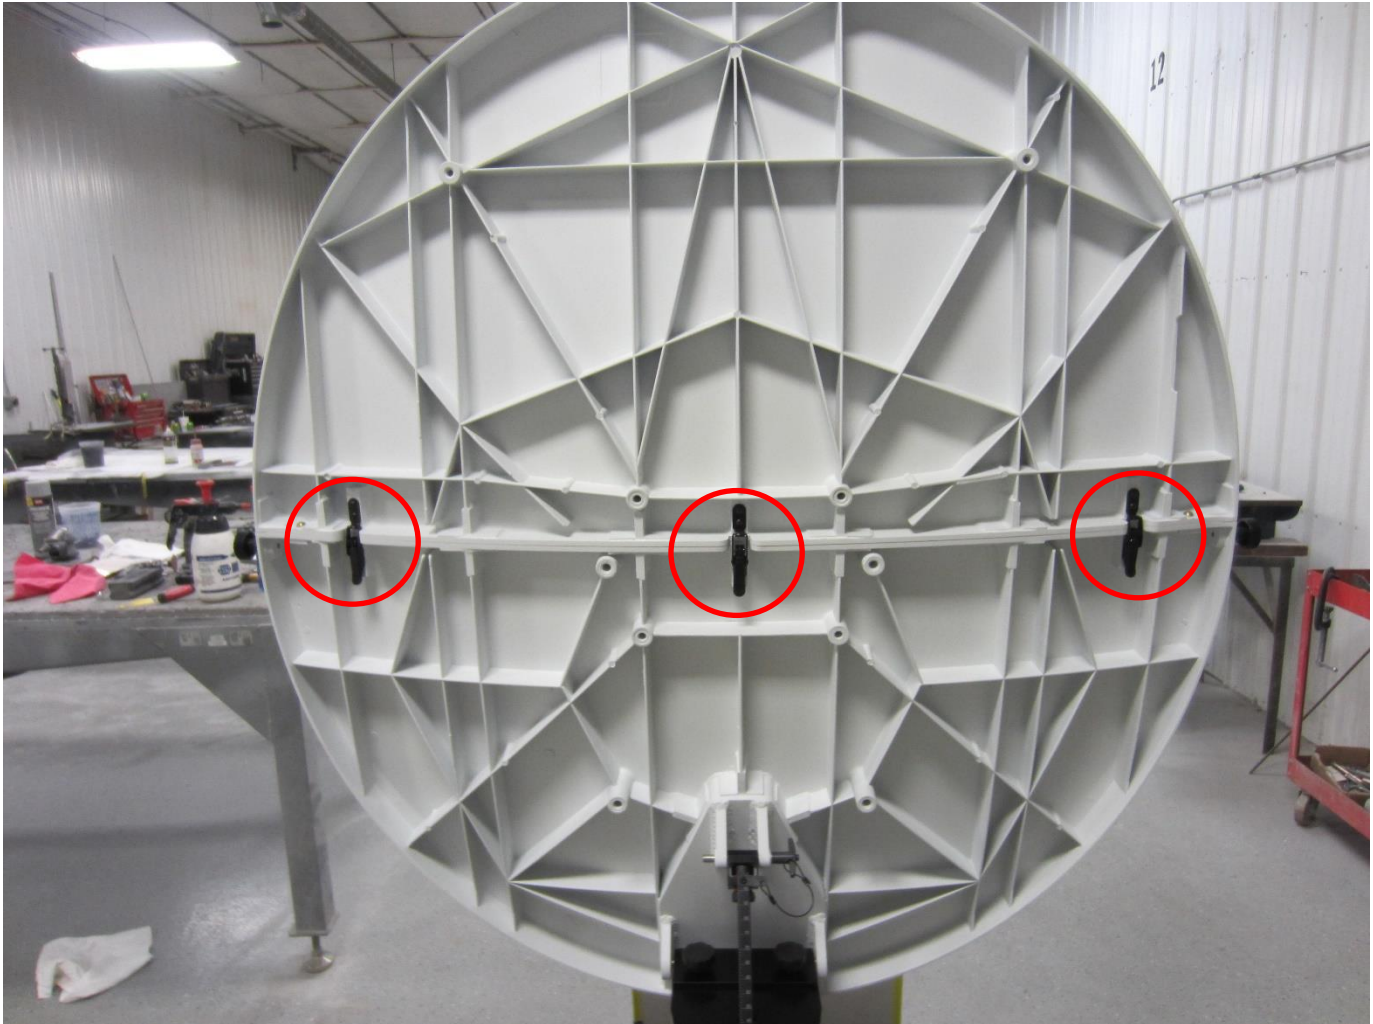

## 1.2m Quick-Deploy SMC Antenna System

### ASSEMBLY


Screw feed boom struts to panel sides.



## 1.2m Quick-Deploy SMC Antenna System

### ASSEMBLY

Attach feed boom to Panel 1 by removing the quick release pin from feed boom. Align mounting holes in feed boom to attachment block on Panel 1 and insert pin. Attach struts using threaded knobs. Attach feed to feed boom assembly. Secure with threaded knob.

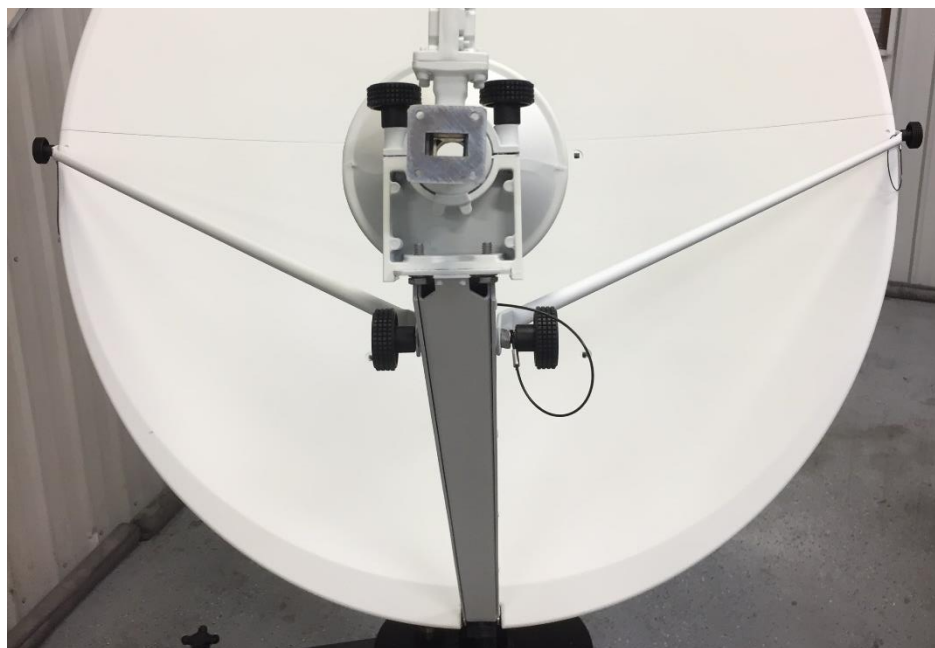

Assembly is now complete.